




















Machine	Explode	Code	Description
DK208-A Apuro Chamber Vacuum Sealer	1	AL830	Pressing Plate
DK208-A Apuro Chamber Vacuum Sealer	2,3,4	AL118	Vacuum Lid Assy
DK208-A Apuro Chamber Vacuum Sealer	5	AL119	Gasket of Mounted Plate
DK208-A Apuro Chamber Vacuum Sealer	6	AK497	Mounted Plate for Heat-Sealing Foam
DK208-A Apuro Chamber Vacuum Sealer	7	AE931	Heat-Sealing Foam
DK208-A Apuro Chamber Vacuum Sealer	8		Outlet Valve
DK208-A Apuro Chamber Vacuum Sealer	12	AP673	Four-Way Connector
DK208-A Apuro Chamber Vacuum Sealer	13	AP674	Tee Connector
DK208-A Apuro Chamber Vacuum Sealer	14	AP675	Alien Tee
DK208-A Apuro Chamber Vacuum Sealer	15	AP676	Inlet Valve
DK208-A Apuro Chamber Vacuum Sealer	9	AJ154	400Z Pump
DK208-A Apuro Chamber Vacuum Sealer	10		Connector Nut
DK208-A Apuro Chamber Vacuum Sealer	11		Connector for Pump Suction
DK208-A Apuro Chamber Vacuum Sealer	16	AE934	0626L Magnetic Valve
DK208-A Apuro Chamber Vacuum Sealer	17		Cord Holder
DK208-A Apuro Chamber Vacuum Sealer	18		Clear Insulating Strip for Motor
DK208-A Apuro Chamber Vacuum Sealer	19	AF369	Motor PCB
DK208-A Apuro Chamber Vacuum Sealer	20		Rubber Pad
DK208-A Apuro Chamber Vacuum Sealer	21		Clear Insulating Strip for Switch Power Board
DK208-A Apuro Chamber Vacuum Sealer	22	AE933	Power Board
DK208-A Apuro Chamber Vacuum Sealer	23		Connector for Vacuum Chamber Suction
DK208-A Apuro Chamber Vacuum Sealer	24	AT162	Seal Ring of Suction Connector
DK208-A Apuro Chamber Vacuum Sealer	25		Connector for Inlet Hole
DK208-A Apuro Chamber Vacuum Sealer	26		Vacuum Chamber
DK208-A Apuro Chamber Vacuum Sealer	27		Clamp
DK208-A Apuro Chamber Vacuum Sealer	28		Clamp Fixing Cover
DK208-A Apuro Chamber Vacuum Sealer	29	AG155	Seal Bar (Assembly)
DK208-A Apuro Chamber Vacuum Sealer	30	AL120	Tee Connector
DK208-A Apuro Chamber Vacuum Sealer	31		M14 Nuts
DK208-A Apuro Chamber Vacuum Sealer	32	AL121	Up-Down Piston (Assembly)
DK208-A Apuro Chamber Vacuum Sealer	33		Back Cover Board
DK208-A Apuro Chamber Vacuum Sealer	34		Damping Gasket of Machine Body
DK208-A Apuro Chamber Vacuum Sealer	35	AP055	Mounted Plate for Control Panel
DK208-A Apuro Chamber Vacuum Sealer	36	AE932	Control Board (Assembly)
DK208-A Apuro Chamber Vacuum Sealer	37	AN250	Pressure Gauge
DK208-A Apuro Chamber Vacuum Sealer	38	AP928	Film-Switch
DK208-A Apuro Chamber Vacuum Sealer	35-38	AL122	Complete Control Panel
DK208-A Apuro Chamber Vacuum Sealer	39		Machine Body
DK208-A Apuro Chamber Vacuum Sealer	40		Jr-101 Power Socket
DK208-A Apuro Chamber Vacuum Sealer	41		Power Cord
DK208-A Apuro Chamber Vacuum Sealer	42	AL124	Rubber Feet (set 4)
DK208-A Apuro Chamber Vacuum Sealer	43		Bottom Board
DK208-A Apuro Chamber Vacuum Sealer	44	AF411	Fixing Panel

Machine	Explode	Code	Description
DK208-A Apuro Chamber Vacuum Sealer	45	AF411	Micro Switch Assembly
DK208-A Apuro Chamber Vacuum Sealer	46	AE930	Sealing Ring
DK208-A Apuro Chamber Vacuum Sealer	47	AL125	Left Tumbler Assembly
DK208-A Apuro Chamber Vacuum Sealer	48	AT890	M10 Nuts
DK208-A Apuro Chamber Vacuum Sealer	49	AL126	Right Tumbler Assembly
DK208-A Apuro Chamber Vacuum Sealer	50		Sliding Gasket
DK208-A Apuro Chamber Vacuum Sealer	51	AT892	M10 Outer Hexagonal Screws
DK208-A Apuro Chamber Vacuum Sealer	N/A	AP404	Wire Connector (Black & Red Wire)
DK208-A Apuro Chamber Vacuum Sealer	N/A		Teflon Heat Bar Tape
DK208-A Apuro Chamber Vacuum Sealer	N/A	AT787	Ribbon Cable with Plug