





Machine	Explode	Code	Description
Apuro Induction Hob Four Zone - 2x3kW	1	AP648	Glass
Apuro Induction Hob Four Zone - 2x3kW	2	AP415	Sensor
Apuro Induction Hob Four Zone - 2x3kW	3	AP416	Coil 3000W
Apuro Induction Hob Four Zone - 2x3kW	3	AP417	Coil 1800W
Apuro Induction Hob Four Zone - 2x3kW	4	AP418	Connect Cable
Apuro Induction Hob Four Zone - 2x3kW	5	AP419	Mainboard 3000W
Apuro Induction Hob Four Zone - 2x3kW	5	AP420	Mainboard 1800W
Apuro Induction Hob Four Zone - 2x3kW	6	AP421	Fan 3000W
Apuro Induction Hob Four Zone - 2x3kW	6	AP398	Fan 1800W
Apuro Induction Hob Four Zone - 2x3kW	7	AP399	3000W Inner Housing
Apuro Induction Hob Four Zone - 2x3kW	7	AP400	1800W Inner Housing
Apuro Induction Hob Four Zone - 2x3kW	8		S/S Top Cover
Apuro Induction Hob Four Zone - 2x3kW	9		Clapboard
Apuro Induction Hob Four Zone - 2x3kW	10	AP422	Knob
Apuro Induction Hob Four Zone - 2x3kW	11	AP423	Front Control Panel
Apuro Induction Hob Four Zone - 2x3kW	12	AP424	Rear Control Panel
Apuro Induction Hob Four Zone - 2x3kW	13		S/S Body
Apuro Induction Hob Four Zone - 2x3kW	14	AP649	Windscreen
Apuro Induction Hob Four Zone - 2x3kW	15	AP425	Green Indicator Light
Apuro Induction Hob Four Zone - 2x3kW	16	AP426	Red Indicator Light
Apuro Induction Hob Four Zone - 2x3kW	17		Bottom Plate
Apuro Induction Hob Four Zone - 2x3kW	18	AP402	Filter Board
Apuro Induction Hob Four Zone - 2x3kW	19	AP427	Air filter
Apuro Induction Hob Four Zone - 2x3kW	20	AP650	Power Cord Magnetic Ring
Apuro Induction Hob Four Zone - 2x3kW	21	AP651	Plug Cord Lock
Apuro Induction Hob Four Zone - 2x3kW	22	AP652	Plug Cord
Apuro Induction Hob Four Zone - 2x3kW	23	AP428	Feet (set 4)
Apuro Induction Hob Four Zone - 2x3kW	N/A	CU559	Stand