



| Machine                        | Explode | Code  | Description                  |
|--------------------------------|---------|---|------------------------------|
| CN324-A Apuro Rice Cooker 4Ltr | 1       | AC373   | Lid Handle                   |
| CN324-A Apuro Rice Cooker 4Ltr | 2       |  | Lid                          |
| CN324-A Apuro Rice Cooker 4Ltr | 3       | AK107   | Non-Stick Inner Bowl         |
| CN324-A Apuro Rice Cooker 4Ltr | 4       | AC381   | Heat Sensor                  |
| CN324-A Apuro Rice Cooker 4Ltr | 5       |  | Heating Plate                |
| CN324-A Apuro Rice Cooker 4Ltr | 6       |  | Sealed Plate                 |
| CN324-A Apuro Rice Cooker 4Ltr | 7       |  | Warm Heat Board              |
| CN324-A Apuro Rice Cooker 4Ltr | 8       |  | Body                         |
| CN324-A Apuro Rice Cooker 4Ltr | 9       |  | Side Handle                  |
| CN324-A Apuro Rice Cooker 4Ltr | 10      |  | Main Switch                  |
| CN324-A Apuro Rice Cooker 4Ltr | 11      |  | Foot                         |
| CN324-A Apuro Rice Cooker 4Ltr | 12      |  | Bottom Cover                 |
| CN324-A Apuro Rice Cooker 4Ltr | 13      |  | Power Cord Clip              |
| CN324-A Apuro Rice Cooker 4Ltr | 14      |  | Power Cord-UK                |
| CN324-A Apuro Rice Cooker 4Ltr | 15      |  | Electric Switch              |
| CN324-A Apuro Rice Cooker 4Ltr | 16      |  | Fuse                         |
| CN324-A Apuro Rice Cooker 4Ltr | 17      |  | Ceramic Connector (2 Points) |
| CN324-A Apuro Rice Cooker 4Ltr | 18      |  | Ceramic Connector (3 Points) |
| CN324-A Apuro Rice Cooker 4Ltr | N/A     | AJ167   | Rice Mat                     |