










Machine	Explode	Code	Description
Apuro Freestanding 4 Zone Induction Cooker	1	AN876	Ceramic Glass
Apuro Freestanding 4 Zone Induction Cooker	2		Stainless Steel Top Cover
Apuro Freestanding 4 Zone Induction Cooker	3	AN877	Sensor 7X-A-A
Apuro Freestanding 4 Zone Induction Cooker	3	AT086	Sensor 8B-A
Apuro Freestanding 4 Zone Induction Cooker	4		Alu Sheet for Coil
Apuro Freestanding 4 Zone Induction Cooker	5	AN878	Coil
Apuro Freestanding 4 Zone Induction Cooker	6	AN879	Spring
Apuro Freestanding 4 Zone Induction Cooker	7	AN880	Heating Coil Bracket
Apuro Freestanding 4 Zone Induction Cooker	8	AN881	Iron Support for Heating Coil
Apuro Freestanding 4 Zone Induction Cooker	9	AN882	PCB Box
Apuro Freestanding 4 Zone Induction Cooker	10	AN883	Connecting Cable
Apuro Freestanding 4 Zone Induction Cooker	11	AN884	Metal Bracket
Apuro Freestanding 4 Zone Induction Cooker	12	AN885	Kick Thermostat
Apuro Freestanding 4 Zone Induction Cooker	13	AN886	Air Filter
Apuro Freestanding 4 Zone Induction Cooker	14	AT274	UK Power Cord
Apuro Freestanding 4 Zone Induction Cooker	15		Fit for Power Cord
Apuro Freestanding 4 Zone Induction Cooker	16		Patch Board for Power Cord
Apuro Freestanding 4 Zone Induction Cooker	17	AN887	Fan
Apuro Freestanding 4 Zone Induction Cooker	18		Iron Back Plate
Apuro Freestanding 4 Zone Induction Cooker	19		Stainless Steel Housing
Apuro Freestanding 4 Zone Induction Cooker	20	AP777	Control Board
Apuro Freestanding 4 Zone Induction Cooker	21	AT702	Control Panel Metal Box
Apuro Freestanding 4 Zone Induction Cooker	22	AN888	Knob
Apuro Freestanding 4 Zone Induction Cooker	23	AN889	Indicator Light
Apuro Freestanding 4 Zone Induction Cooker	24	AN890	Rear Castor
Apuro Freestanding 4 Zone Induction Cooker	25		Front Castor (With Brake)
Apuro Freestanding 4 Zone Induction Cooker	26	AS836	9025 Fan
Apuro Freestanding 4 Zone Induction Cooker	27		Inner Housing
Apuro Freestanding 4 Zone Induction Cooker	28	AS837	8025 Fan
Apuro Freestanding 4 Zone Induction Cooker	29	AS838	Inner Cooling Fan
Apuro Freestanding 4 Zone Induction Cooker	30	AS839	Mainboard
Apuro Freestanding 4 Zone Induction Cooker	31		Connect Board
Apuro Freestanding 4 Zone Induction Cooker	32		Two Pin Cable
Apuro Freestanding 4 Zone Induction Cooker	33		Shielded Cable