







Machine	Explode	Code	Description
CE208-A Apuro Induction Cooktop	1	AD150	Ceramic Glass
CE208-A Apuro Induction Cooktop	2		Insulation Sticker
CE208-A Apuro Induction Cooktop	3	AP524	Control Knob-old version
CE208-A Apuro Induction Cooktop	4	AU181	Control Panel-old version
CE208-A Apuro Induction Cooktop	5	AU182	Display PCB-old version
CE208-A Apuro Induction Cooktop	3	AD151	Control Knob-new version
CE208-A Apuro Induction Cooktop	4	AD153	Control Panel-new version
CE208-A Apuro Induction Cooktop	5		Display PCB-new version
CE208-A Apuro Induction Cooktop	6	AD156	Control Panel Sticker
CE208-A Apuro Induction Cooktop	7		Collision Avoidance Part
CE208-A Apuro Induction Cooktop	8	AT712	S/S Body
CE208-A Apuro Induction Cooktop	9	AL389	Sensor
CE208-A Apuro Induction Cooktop	10	AG086	Heating Coil
CE208-A Apuro Induction Cooktop	11		PCB Mainboard-old version
CE208-A Apuro Induction Cooktop	11	AG087	PCB Mainboard-new version
CE208-A Apuro Induction Cooktop	12	AT713	Inner Plastic Box
CE208-A Apuro Induction Cooktop	13		AUS Power Cord
CE208-A Apuro Induction Cooktop	14	AG088	Fan
CE208-A Apuro Induction Cooktop	15	AT789	Power Cord Clasp
CE208-A Apuro Induction Cooktop	16	AT714	Bottom
CE208-A Apuro Induction Cooktop	17	AH386	Foot
CE208-A Apuro Induction Cooktop	18		Earth Wire
CE208-A Apuro Induction Cooktop	19	AP857	Air Filter-old version
CE208-A Apuro Induction Cooktop	19	AM040	Air Filter-new version
CE208-A Apuro Induction Cooktop	N/A		Fuse
CE208-A Apuro Induction Cooktop	N/A	AM657	Knob Hole of Holder
CE208-A Apuro Induction Cooktop	N/A	AN563	Control Panel Plastic Holder
CE208-A Apuro Induction Cooktop	N/A	AN432	Potentiometer

