
















Machine	Explode	Code	Description
CN324-A Apuro Rice Cooker 4Ltr	1	AC373	Lid Handle
CN324-A Apuro Rice Cooker 4Ltr	2		Lid
CN324-A Apuro Rice Cooker 4Ltr	3	AK107	Non-Stick Inner Bowl
CN324-A Apuro Rice Cooker 4Ltr	4	AC381	Heat Sensor
CN324-A Apuro Rice Cooker 4Ltr	5		Heating Plate
CN324-A Apuro Rice Cooker 4Ltr	6		Sealed Plate
CN324-A Apuro Rice Cooker 4Ltr	7		Warm Heat Board
CN324-A Apuro Rice Cooker 4Ltr	8		Body
CN324-A Apuro Rice Cooker 4Ltr	9		Side Handle
CN324-A Apuro Rice Cooker 4Ltr	10		Main Switch
CN324-A Apuro Rice Cooker 4Ltr	11		Foot
CN324-A Apuro Rice Cooker 4Ltr	12		Bottom Cover
CN324-A Apuro Rice Cooker 4Ltr	13		Power Cord Clip
CN324-A Apuro Rice Cooker 4Ltr	14		Power Cord-UK
CN324-A Apuro Rice Cooker 4Ltr	15		Electric Switch
CN324-A Apuro Rice Cooker 4Ltr	16		Fuse
CN324-A Apuro Rice Cooker 4Ltr	17		Ceramic Connector (2 Points)
CN324-A Apuro Rice Cooker 4Ltr	18		Ceramic Connector (3 Points)
CN324-A Apuro Rice Cooker 4Ltr	N/A	AJ167	Rice Mat