

apuro

Waffle Maker

Instruction manual



**Model:
CJ564-A**

Safety instructions

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- **Caution! Hot surface!**
- **During and after cooking, the unit is still hot. Never touch the surface to avoid scalding.**
- DO NOT immerse the appliance in water.
- DO NOT clean with jet/pressure washers.
- DO NOT carry when hot.
- DO NOT leave the appliance unattended during operation.
- DO NOT obstruct or cover the appliance in any way when in use.
- Not suitable for outdoor use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- This appliance must only be used in accordance with these instructions and by persons competent to do so.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an APURO agent or a recommended qualified technician in order to avoid a hazard.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- APURO recommend that this appliance should be periodically tested (at least annually) by a Competent Person. Testing should include, but not be limited to: Visual Inspection, Polarity Test, Earth Continuity, Insulation Continuity and Functional Testing.
- Always use the black handle to lift the plate.
- The appliance should never be used in the opened position.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your APURO product.

Pack Contents

The following is included:

- APURO waffle maker
- Waste trays
- Instruction manual

APURO prides itself on quality and service, ensuring that at the time of unpacking the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your APURO dealer immediately.

Installation

1. Place the unit on a heat-resistant surface. Avoid placing it on or close to flammable materials. Maintain a distance of 20cm (7 inches) between the appliance and walls or other objects for ventilation.
2. Keep the unit away from splashing water and countertop's edge.

Note: Before using for the first time, clean the appliance with soapy water. Let dry completely.






Operation

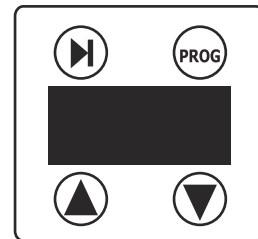
Cooking

1. Close the plates.
 - **Note: It may be necessary to slightly grease the plates with cooking oil before cooking depending on the foodstuff.**
2. Connect the appliance to the mains power supply and set the power switch to "I".
3. Set the thermostat to the desired temperature (50°C-300°C). The HEAT indicator light turns on.
 - **Note: 185°C is suitable for general waffle cooking.**
4. When the set temperature is reached, the HEAT indicator light turns Off.
 - **Note: During use, the HEAT indicator light keeps on and off, indicating the set temperature is being kept.**
5. Lift the top plate and place the waffle mix on the bottom plate.
6. Lower the top plate.





Using the timer

The digital timer with audible alarm can be set from 1 second to 19 minutes and 59 seconds. The timer provides an audible alarm after the set time expires. It provides no electrical control over the unit.

- : Press to start timer, press again to stop. The timer will provide an audible alarm after the set time. The alarm will beep 10 times and the display will continue to flash until timer is reset (press the  button).
- : Press to add extra time.
- : Press to reduce time.
- : There are a total of 8 programmable timer settings by the factory before shipment as below:



Program	1	2	3	4	5	6	7	8
Factory preset time	00:30	01:00	01:30	02:00	02:30	03:00	03:30	04:00

- To change the length of a program, select the program you want to change by scrolling using the  button.
- Adjust the program time by using the  and  buttons. Press  to commence the count-down. The new program time will be automatically stored.

After use: Set the thermostat to "MIN" and power switch to "O". Then disconnect from the power supply.

Overheating protection

This appliance is featured with an overheat protection. Should the temperature exceed safe levels the appliance will automatically cut off power.

The thermal Cut-out switch is located on the rear of the appliance. To reset the appliance after a sufficient cool-down period:

1. Unscrew the reset switch cover.
2. Press the small reset switch down until it clicks, using a blunt pointed instrument.
3. The appliance is now reset and can be used as normal.

Cleaning, Care & Maintenance

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this, follow the cleaning steps below:

- Always turn OFF the appliance and disconnect from the power supply before cleaning.
- Allow the appliance to cool before cleaning, but for best results clean the plates when they are still slightly warm.
- Use warm, soapy water and a damp cloth to clean the exterior of the appliance.
- Take care when using scrapers to remove cooking residues as they can damage the cooking surface.
- Dry thoroughly after cleaning.

WARNING: Do not use steel wool as it may leave shards that could contaminate food.

Waste trays

- This appliance features waste trays to collect any liquid or fats that run off during cooking.
- At least once a day, remove and empty the trays before washing with warm, soapy water.

WARNING: Do not remove the trays during or immediately after use as the contents will be hot.

Troubleshooting

A qualified technician must carry out repairs if required.

Fault	Probable Cause	Solution
Appliance not working	The unit is not switched on	Check the unit is plugged in correctly and switched on
	Plug or lead is damaged	Consult a qualified technician
	Mains power supply fault	Check mains power supply
The waffles are sticking to the plates and rips in two when the lid is lifted	Different waffle mixes cook using different times and temperatures. Low sugar content may cook on higher temps while high sugar content waffle mix require lower temperature to stop the outside caramelising before the inside has cooked	Turn the temperature of the waffle maker down and use additional cooking time. Also using a little spray oil during the couple of uses can help to release the waffles too
Appliance heats up but indicator light Not On	Indicator light has expired	Consult a qualified technician
HEAT indicator light comes on but appliance does not heat up	Faulty element	Consult a qualified technician
	Faulty thermostat	Consult a qualified technician
	Thermostat set incorrectly	Check thermostat
Appliance slow to heat up	Cooking surface not clean	Clean cooking surface as instructed
	Faulty element	Consult a qualified technician
No power	Thermal cut-out switch is activated	Check that the appliance is safe then press the reset switch on the rear of the unit

Technical Specifications

Note: Due to our continuous improvement process, the product specifications are subject to change without notice.

Model	Voltage	Power	Current	Dimensions H x W x D mm	Weight
CJ564-A	220-240V~ 50-60Hz	1600W	7A	245 x 325 x 400	9.7kg

Electrical Wiring

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E



This appliance must be earthed.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

Apuro parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.



Apuro products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Apuro. Every effort is made to ensure all details are correct at the time of going to press, however, Apuro reserves the right to change specifications without notice.

DECLARATION OF CONFORMITY

• Conformanceverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad • Declaração de conformidade

Equipment Type • Uitrustingstype • Type d'équipement • Gerätetyp • Tipo di apparecchiatura • Tipo de equipo • Tipo de equipamento		Model • Modèle • Modell • Modello • Modelo • Malli
Commercial Waffle Maker		CJ564-A
Application of Territory Legislation & Council Directives(s) Toepassing van Europese Richtlijn(en) • Application de la/des directive(s) du Conseil • Anwendbare EU-Richtlinie(n) • Applicazione delle Direttive • Aplicación de la(s) directiva(s) del consejo • Aplicação de directiva(s) do Conselho	Electrical Safety IEC 60335-1:2010 +A1:2013 +A2:2016 IEC 60335-2-38:2002 +A1:2008 +A2:2017 Electro-Magnetic Compatibility (EMC) EN IEC 55014-1:2021 EN IEC 55014-2:2021 BS EN IEC 61000-3-2: 2019 +A1:2021 BS EN 61000-3-3: 2013 +A1:2019 +A2:2021	
Manufacturer Name • Naam fabrikant • Nom du producteur • Name des Herstellers • Nome del produttore • Nombre del fabricante • Nome do fabricante		Apuro

I, the undersigned, hereby declare that the equipment specified above conforms to the above Territory Legislation, Directive(s) and Standard(s).

Ik, de ondergetekende, verklaar hierbij dat de hierboven gespecificeerde uitrusting goedgekeurd is volgens de bovenstaande Richtlijn(en) en Standaard(en).

Je soussigné, confirme la conformité de l'équipement cité dans la présente à la / aux Directive(s) et Norme(s) ci-dessus
 Ich, der/die Unterzeichnende, erkläre hiermit, dass das oben angegebene Gerät der/den oben angeführten Richtlinie(n) und Norm(en) entspricht.

Il sottoscritto dichiara che l'apparecchiatura di sopra specificata è conforme alle Direttive e agli Standard sopra riportati.
 El abajo firmante declara por la presente que el equipo arriba especificado está en conformidad con la(s) directiva(s) y estándar(es) arriba mencionadas.

Eu, o abaixo-assinado, declaro que o equipamento anteriormente especificado está em conformidade com a(s) anterior(es) Directiva(s) e Norma(s)

Date • Data • Date • Datum • Data •
 Fecha • Data

Signature • Handtekening • Signature
 • Unterschrift Firma • Firma •
 Assinatura

Full Name • Volledige naam • Nom et
 prénom • Vollständiger Name • Nome
 completo • Nombre completo • Nome
 por extenso

Position • Functie • Fonction • Position
 • Qualifica • Posición • Função

Manufacturer Address • Adres
 fabrikant • Adresse du producteur •
 Anschritt des Herstellers • Indirizzo
 del produttore • Dirección del
 fabricante • Morada do fabricante

15th September 2023	
DocuSigned by:  039382C9FD9C478	DocuSigned by:  388FAD00DFE8483
Ashley Hooper	Brendan Denmeade
Group Head of Product Quality & Compliance	Commercial Manager/ Responsible Supplier
Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom	15 Badgally Road, Campbelltown NSW 2560





CJ564-A_A5_v2_2024/11/12